

## SLOPE TOP AND SCRIBE FILLER

IN THE INTEREST OF SAFETY, ALL METAL LOCKERS MUST BE SECURELY ANCHORED TO THE FLOOR AND WALL.

### SECTION THRU SPLICE COVER



SLOPE TOP REAR SUPPORTS ARE SPACED APPROXIMATELY 30" CENTER TO CENTER AND 6" FROM THE END TO THE SUPPORT CENTER.

CONTINUOUS END CLOSURE (RIGHT)

BEND SLOPE SUPPORT AT SLOT FOR CORRECT HEIGHT



END CLOSURES SUPPORT SLOPE TOP AT OVERLAPS

SLOPE TOP SPLICE COVER

CONTINUOUS END CLOSURE (LEFT)


END CLOSURES SUPPORT SLOPE TOP AT OVERLAPS

OPTIONAL DOUBLE ROW HIP END (TWO SINGLE ROW HIP ENDS BOLTED TOGETHER)

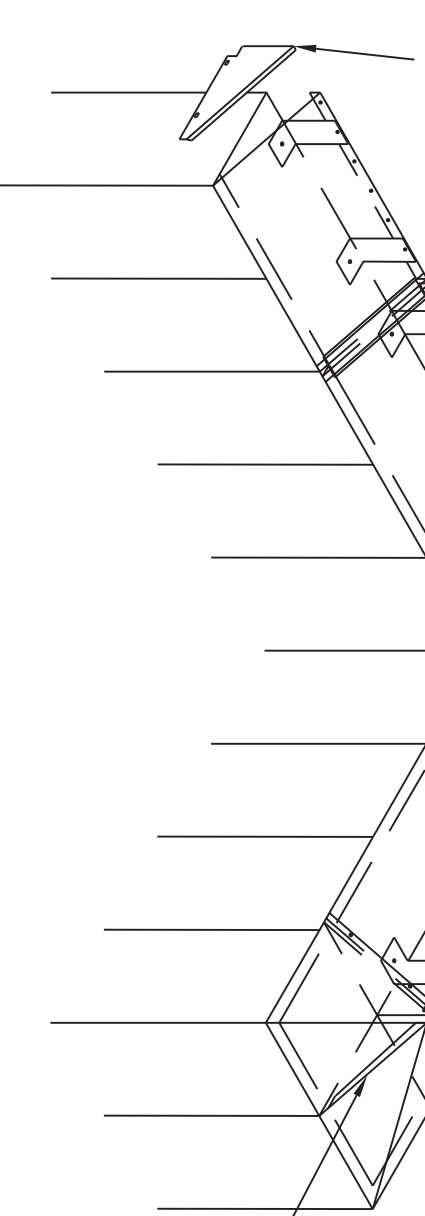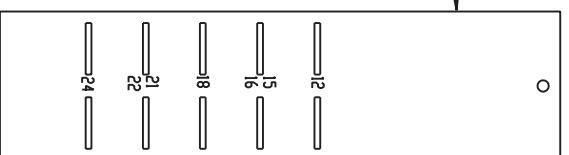


## SLOPE TOPS & SCRIBE FILLERS

DOUBLE ROW FLAT TOP  
CLOSURE STRIP

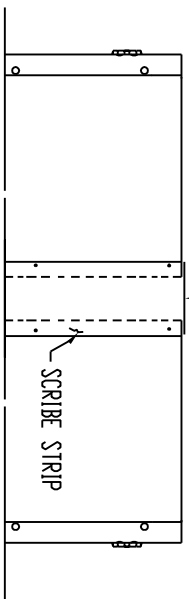


BACK TO BACK W/FLAT TOP

SCRIBE STRIP  
(REQUIRED WHEN BLOCKING IS USED)

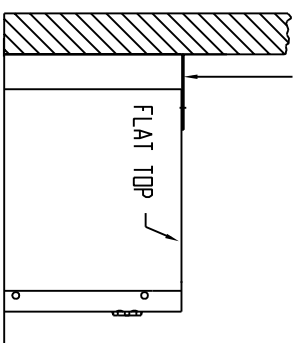


SINGLE ROW W/FLAT TOP

DOUBLE ROW SLOPE TOP  
CLOSURE STRIP

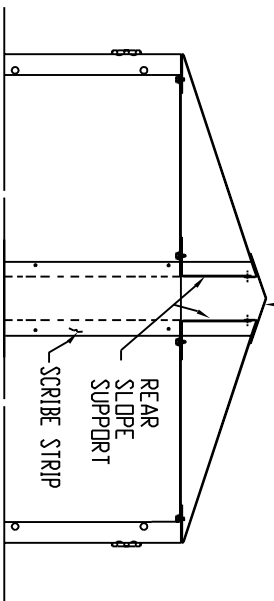

BACK TO BACK W/SLOPE TOP

SLOPE TOP SCRIBE STRIP  
( REQUIRED WHEN BLOCKING IS USED )

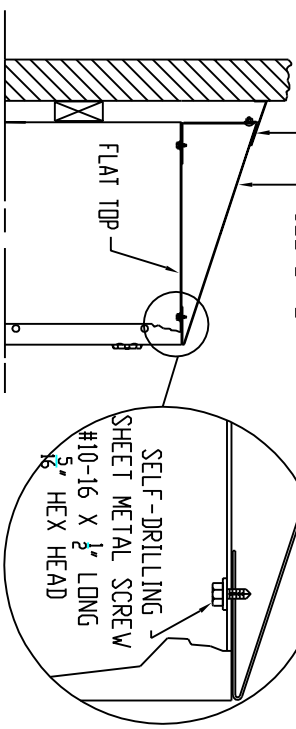

SINGLE ROW W/SLOPE TOP

NOTES :

1. LEVEL AND BOLT LOCKERS TOGETHER BEFORE ATTEMPTING TO INSTALL SLOPED TOPS.
2. BOLT REAR FLANGE OF TOP TO THREE (3) SLOPE TOP REAR SUPPORTS AS SHOWN.  
(DOUBLE ROW LOCKERS BOLT REAR FLANGE OF BOTH TOPS TO SLOPE TOP REAR SUPPORTS.)
3. ATTACH END CLOSURE FOR CONCEALED CONDITION ONLY USING TWO (2) TEK SCREWS THRU SLOPE TOP.
4. SLIP SPLICE COVER ONTO ENDS) TO BE JOINED. PUT WHOLE ASSEMBLY ONTO TOP OF LOCKERS AND ALIGN.
5. DO THE SAME WITH THE NEXT SECTION OF SLOPE TOP AND SLIP INTO THE SPLICE COVER OF THE SECTION ALREADY FASTENED.
6. CUT LAST SECTION TO REQUIRED LENGTH AND SLIP CUT EDGE INTO THE LAST ATTACHED SPLICE COVER, THEN ATTACH SLOPE TOP TO END CLOSURE USING TEK SCREWS.
7. FASTEN THE FRONT FLANGE THROUGH THE HOLE IN THE FLAT TOP. THREE (3) TEK SCREWS PER SLOPE TOP.
8. WHEN ALL FRONT FLANGES ARE FASTENED, ALIGN EXPOSED SLOPE END CLOSURES. FIRST FASTEN TO THE LOCKER, THEN DOWN THROUGH SLOPE TOP.

SHEET 3 OF 3