PEDESTAL INSTALLATION INSTRUCTIONS FOR HARDWOOD BENCH TOPS

General Instructions

- 1. Check material received against the packing list. First, check the number of packages received and then check the contents of each package.
- 2. Check the material received for damage. If damage has occurred, secure a "damage notation" from the carrier
- 3. Identify each part as it is unpacked and put like parts together as close as possible to the working area where they are to be assembled.
- 4. Be careful to use the correct hardware as specified in the assembly instructions.

CAUTION


In the interest of safety, all lockers must be securely anchored to the floor and/or wall. For safety, handle all components carefully and wear work gloves when assembling lockers. Install all units plumb and tighten all hardware securely. Retain instruction for future reference.




866-566-0500 info@Hallowell-List.com www.Hallowell-List.com

GENERAL ASSEMBLY FOR PEDESTALS

USING THE PEDESTAL AS A TEMPLATE, LOCATE CENTERS. DRILL 3/16" HOLES AND ATTACH WITH THE SCREWS PROVIDED. FLOOR ANCHORS ARE PROVIDED BY THE INSTALLER. RECOMMENDED HILTI ALUMINUM HIT ANCHORS CAT. NO. 5400192 OR 1/4" X 2" TAP-CON.

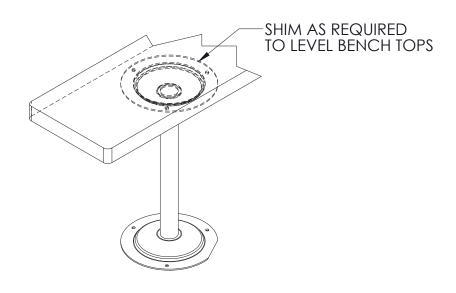



8032 PEDESTAL ANCHORING

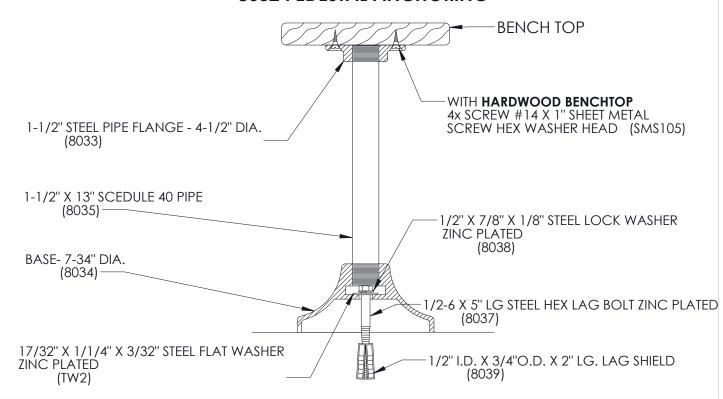


\$A0754-1WD 10/31/2024

PEDESTAL TO HARDWOOD BENCH TOP ATTACHMENT HARDWARE

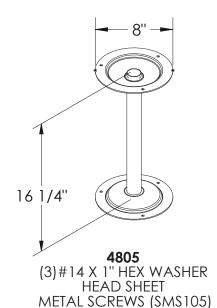


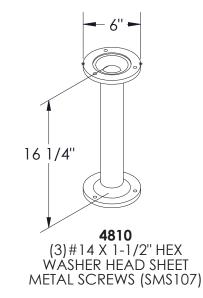


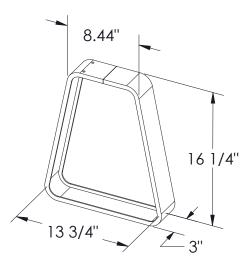

4820

(4)#14 X 1" HEX WASHER HEAD SHEET METAL SCREWS (SMS105)

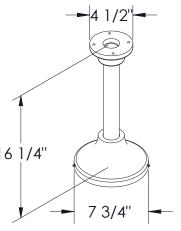

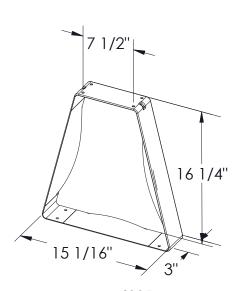


16 1/4"


4825 (4)#14 X 1" HEX WASHER HEAD SHEET METAL SCREWS (SMS105)

8032 (4) #14 X 1" HEX WASHER **HEAD SHEET** METAL SCREWS (SMS105)

NOTE: FLOOR ANCHORS SUPPLIED BY OTHERS

HARDWOOD BENCHTOP PEDESTAL SPACING



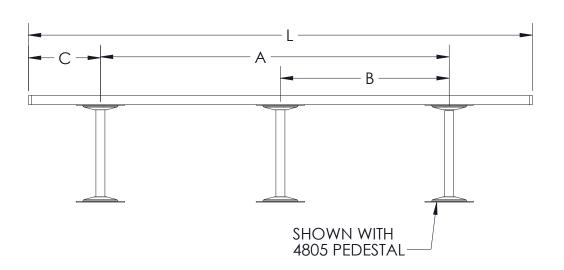

LENGTH	L	Α	В	С	QTY. OF PEDESTALS
3 FT.	36"	24"	Х	6"	2
4 FT.	48"	32"	X	8"	2
5 FT.	60''	40''	Х	10"	2
6 FT.	72"	48"	X	12"	2
7 FT.	84"	60''	Х	12"	2
8 FT.	96"	72"	X	12"	2
9 FT.	108"	84"	42"	12"	3
10 FT.	120"	96"	48"	12'	3
11 FT.	132"	108"	54"	12"	3
12 FT.	144"	120"	60''	12"	3
13 FT.	156"	132"	66"	12"	3
14 FT.	168"	144"	72"	12"	3
15 FT.	180"	156"	52''	12"	4

SA0754-3WD 10/31/2024

PEDESTAL INSTALLATION INSTRUCTIONS FOR PHENOLIC & HDPE PLASTIC BENCH TOPS

General Instructions

- 1. Check material received against the packing list. First, check the number of packages received and then check the contents of each package.
- 2. Check the material received for damage. If damage has occurred, secure a "damage notation" from the carrier
- 3. Identify each part as it is unpacked and put like parts together as close as possible to the working area where they are to be assembled.
- 4. Be careful to use the correct hardware as specified in the assembly instructions.

CAUTION


In the interest of safety, all lockers must be securely anchored to the floor and/or wall. For safety, handle all components carefully and wear work gloves when assembling lockers. Install all units plumb and tighten all hardware securely. Retain instruction for future reference.




866-566-0500 info@Hallowell-List.com www.Hallowell-List.com

GENERAL ASSEMBLY FOR PEDESTALS

USING THE PEDESTAL AS A TEMPLATE, LOCATE CENTERS. DRILL 3/16" HOLES AND ATTACH WITH THE SCREWS PROVIDED. FLOOR ANCHORS ARE PROVIDED BY THE INSTALLER. RECOMMENDED HILTI ALUMINUM HIT ANCHORS CAT. NO. 5400192 OR 1/4" X 2" TAP-CON.

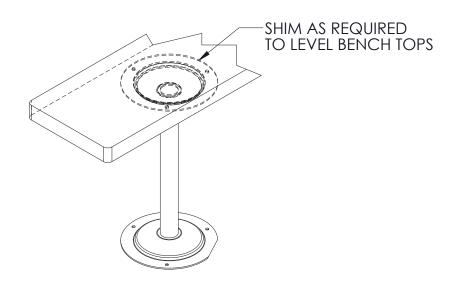


8032 PEDESTAL ANCHORING

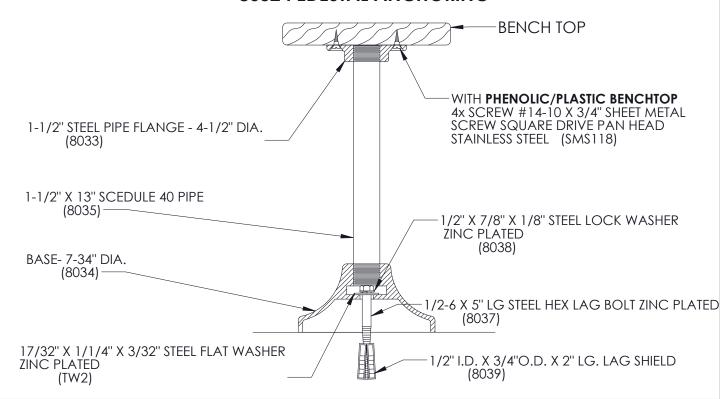


\$A0754-1PH 10/31/2024


PEDESTAL TO PHENOLIC/PLASTIC BENCH TOP ATTACHMENT HARDWARE

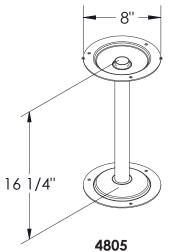


(3)#14-10 X .625" SQ DRIVE PAN HEAD SHEET METAL SCREWS STAINLESS STEEL (SMS120)

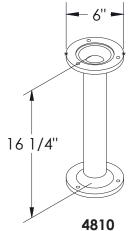


(3)#14-10 X 1" SQ DRIVE PAN HEAD SHEET METAL SCREWS STAINLESS STEEL (SMS117)

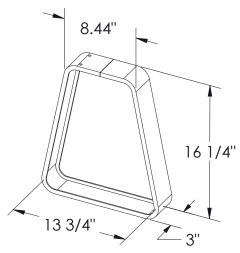

4820 (4)#14-10 X .625" SQ DRIVE PAN HEAD SHEET METAL SCREWS STAINLESS STEEL (SMS120)

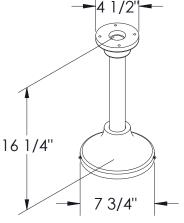

8032 (4)#14-10 X 3/4" SQ DRIVE PAN HEAD SHEET METAL SCREWS STAINLESS STEEL (SMS118)

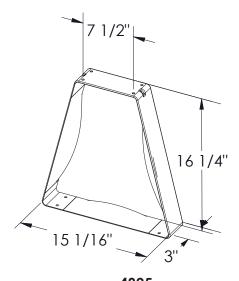


4825 (4)#14-10 X .625" SQ DRIVE PAN HEAD SHEET METAL SCREWS STAINLESS STEEL (SMS120)

NOTE: FLOOR ANCHORS SUPPLIED BY OTHERS

PHENOLIC/PLASTIC BENCHTOP PEDESTAL SPACING



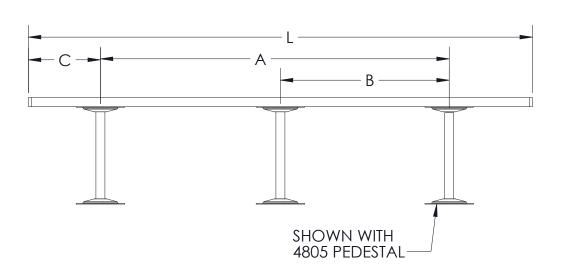

LENGTH	L	А	В	С	QTY. OF PEDESTALS
3 FT.	36"	20''	Х	8''	2
4 FT.	48"	32"	X	8"	2
5 FT.	60''	40''	Х	10"	2
6 FT.	72"	52"	26"	10"	3
7 FT.	84"	64"	32"	10"	3
8 FT.	96"	76"	38"	10"	3
9 FT.	108"	90''	30"	9"	4
10 FT.	120"	102"	34"	9"	4
11 FT.	132"	108"	36"	12"	4
12 FT.	144''	120"	40''	12"	4

SA0754-3PH 10/31/2024